


2" Screen Room Installation Instructions

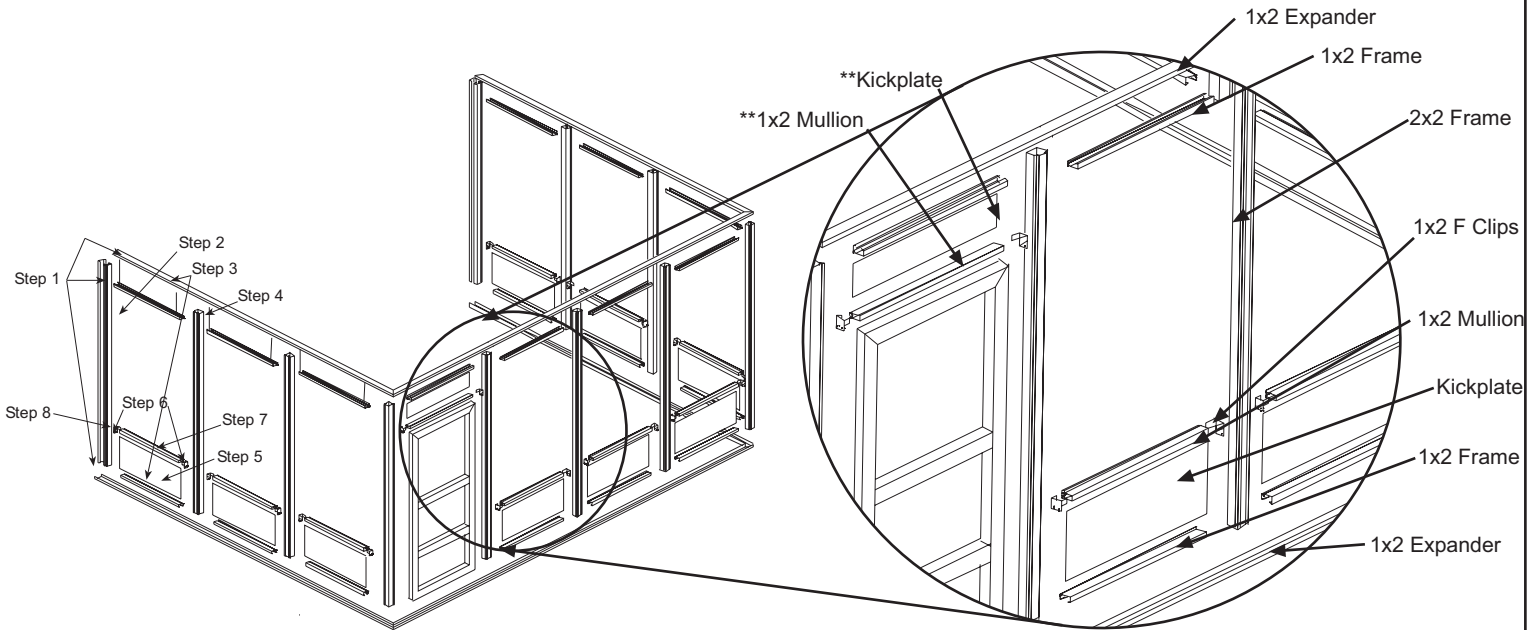

- 1) Install #441 1"x2" Expander channel on wall of existing structure, floor, and underside of roof.
- 2) Install #440 1"x2" Horizontal Enclosure frame inside of #441 1"x2" Expander channel on the wall.
- 3) Install pre-cut 3' or 4' lengths of #440 1"x2" Horizontal Enclosure frame into the top and bottom #441 1"x2" Expander channels.
- 4) Install #437 2"x2" Vertical Enclosure Frame into the top and bottom #441 1"x2" Expander channel and place up against the #440 1"x2" Horizontal Enclosure Frames.
- 5) Slide kickplate panels into slots in between vertical members.
- 6) Install "F" clips into the end of the #439 horizontal mullion.
- 7) Drop the #439 horizontal mullion onto top of kickplate (kickplate will fit in grooves on #439 horizontal mullion).
- 8) Fasten #439 horizontal mullion to the uprights through the "F" clips.
- 9) Continue these steps around the perimeter of your enclosure until you have completely enclosed the desired area.

* If special size openings are required, measure opening and cut 1"x2" enclosure frames, 1"x2" mullions, and kickplate to fit inside of your vertical members.

** Door openings utilize the 1"x2" horizontal mullion at 80" door opening height. Cut down the kickplate to fit inside the area above the door opening.

